



## LINDSEY MANUFACTURING COMPANY

760 N. Georgia Ave. P.O. Box 877 Azusa, CA 91702 U.S.A.

Phone: (626) 969-3471 Fax: (626) 969-3177

e-mail: [mail@lindsey-usa.com](mailto:mail@lindsey-usa.com)

[www.lindsey-usa.com](http://www.lindsey-usa.com)

## **SVM I INSTALLATION INSTRUCTIONS**

Following the instructions below will insure a safe and simple installation.

1. Install the mounting bracket (in the box) to the bottom of the sensor
2. De-energize the system then install the sensor to the allocated location
3. Connect the grounding wire - thread the grounding wire (recommend using #4 copper wire) through the .25" hole of the grounding insert at the bottom then tighten the 3/8-16 bolt
4. Connect the primary voltage - thread the jumper wire from primary conductor through the .25" hole of the high voltage insert on the top then tighten the 3/8-16 bolt
5. Connect the cable to the RTU
6. Energize the system